

SERVICE PARTS

Key No.	Part No.	Description
1	97016466	Housing
2	97016449	Duct Connector - 4"
3	98010102	Wiring Plate
4	99170245	Screw, no. 8-18 x .375" (2 required)
5	97016765	Wire Panel/Harness Assembly
6	99020284	Blower Wheel
7	99080577	Motor (QTRN090C)
	99080569	Motor (QTRN110C)
8	99100491	Isolator (4 required)
9	97016468	Motor Plate
10	99250959	Washer no. 8 (4 required)
11	99260558	Nut, Hex Lock no. 8-32 (4 required)
*	97016733	Motor Assembly (QTRN090C)
*	97016771	Motor Assembly (QTRN110C) (includes keys nos. 6 thru 11)
12	97016496	Grille Assembly (includes key no. 13)
13	99140199	Grille Spring (2 required)
14	99111293	Spacer (2 supplied)

Order service parts by "Part No." - not by "Key No."

SERVICE NOTE

To remove Blower Assembly:

Unplug motor (7).

Remove screw (4) from motor plate (9) flange.

Find the single **TAB** on the motor plate (located next to the receptacle).

Push up near motor plate tab while pushing out on side of housing or insert a straight-blade screwdriver into slot in housing (next to tab) and twist screwdriver.

