

WH12X20814 USER INTERFACE BOARD

Procedure of Programming the Washer UI Board

The washer is not functional until the new control is programmed.

1. After installing the new control, plug the washing machine in the designated outlet to power up the control.
2. The new control will now display "---", which means that no model has been selected/programmed.
3. Rotate the knob until the correct model number is displayed. For example :
 - Select **1** for model **GFWN1100H**
 - Select **2** for model **GFWH1200H**
4. Press and hold the Start key for 3 seconds (or until second "beep" is heard)
5. Press the Power key to reset the control.
6. The washer is now ready to be used by consumer.
7. If an error is made in programming the control, enter test mode and select T01. Then, proceed to Step 3.