



Compressor Terminals

C = Common

R = Run

S = Start

Electrical components are supplied unassembled.
Use of components other than specified will void warranty.

