Electrolux

Feedback from the field leads to continuous improvement of service instructions.


Please read and follow instructions carefully as they may have changed.


INSTRUCTIONS FOR INSTALLATION OF MAIN CONTROL BOARD REPLACEMENT KIT

Kit	contains:	main control board	and	jumper harness	and	jumper harness
5303918498		242009006		242060501		242060401
5303918514		242009011		242060501		242060401
5303918556		242009033		242060501		242060401
5303918563		242009013		242060501		242060401
5303918517		242009018		242060501		242060401
5303918558		242009032		242060501		242060401
5303918523		242009019		242060501		242060401

CAUTION: Unit must be disconnected from electrical power source for the duration of this procedure.

- Remove the main control board from the unit.
- Install the two jumper harnesses onto the main control board supplied in this kit. Fig. 1
- Connect the cabinet wiring harness connector to the connectors on the jumper harness.
- The connector from the cabinet harness that connects to the J9 A1 terminals will connect directly to the new main control board, not the jumper harness. Fig. 2
- Fold the jumper harnesses into the main control board housing and reinstall the main control board and housing onto the unit.

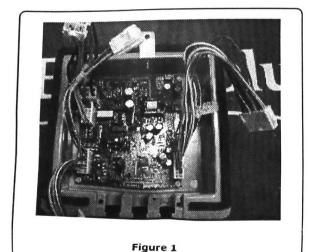

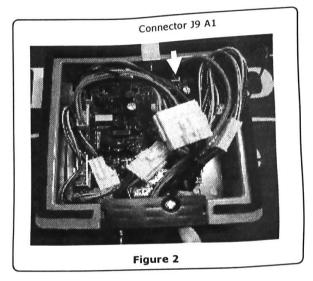

We strive to provide clear and accurate service instructions. If you found any portion of this document to be unclear or inaccurate, or if you have suggestions for improvements please let us know. Contact us at 1-888-842-3660 or suggestions@electrolux.com