



## INSTRUCTION 5303950330 – Missing Diffuser Installation


### Components:

- Styrofoam diffuser - A00625101
  - Gasket - 242240602
- Note: This instruction is for service kit 5303918717

### To install the missing components into the control box:

- Unplug the main power cord from the wall.
- Remove the screw holding the control box to the top of the fresh food compartment.
  - Disconnect the control board electrical connection from the top of the fresh food compartment.
- Remove the old control board subassembly from the refrigerator.
- Connect the wiring harness for the new control board to the refrigerator.
- Install the new control board to the refrigerator.
  - Insert the drain nipple into the hole on the back of the refrigerator.
  - Install the screw to hold the control box to the refrigerator.
  - Be sure no wires are pinched during installation.
- Reconnect the main power cord to the wall.

The service parts will look like this:

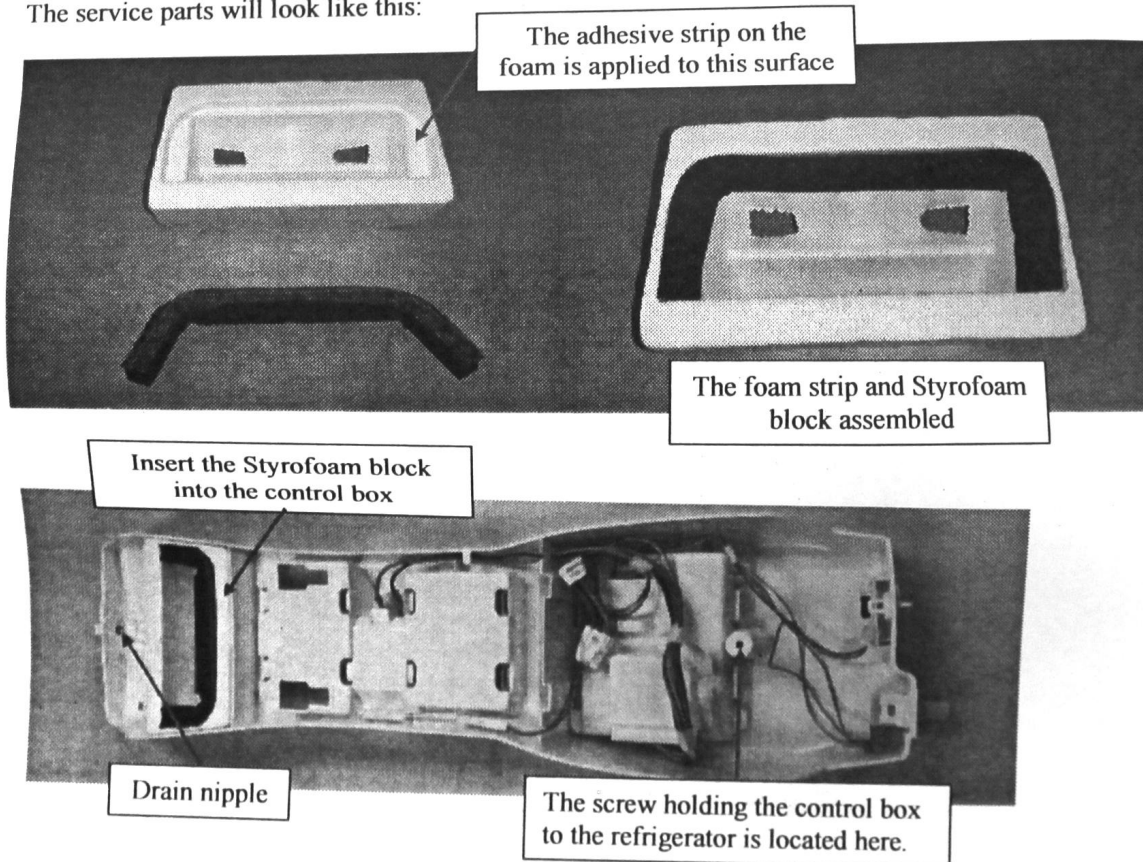

We strive to provide clear and accurate service instructions. If you found any portion of this document to be unclear or inaccurate, or if you have suggestions for improvements please let us know. Contact us at 1-888-842-3660 or [suggestions@electrolux.com](mailto:suggestions@electrolux.com)

©2011 Electrolux Home Products, Inc.