

ATTENTION

Configure personality header **BEFORE** installing replacement control into unit

Select the User Interface Appearance which best fits the unit you are servicing.

CONTROL TYPE	USER INTERFACE APPEARANCE	MODEL NUMBER*	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
TOP		GDT680 GDT720		NOT REQUIRED
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	GDT740 PDT750		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	PDT760		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Rinse</p>	ZDT800		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	ZDT870		
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Rinse</p>	CDT725		NOT REQUIRED
TOP	<p>CYCLES: AutoSense, Heavy, Normal, Light, Express, eWash, Rinse</p>	CDT765		

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.

* Derivative or special models may not be included in the model table.


Select jumper configuration based off Identification Sticker in unit or closest User Interface Appearance shown above.

ATTENTION

Configure personality header **BEFORE** installing replacement control into unit

Directions for control board replacement:

- 1.) Identify the jumper configuration for the replacement control board. Configuration is located either:
 - A.) On the Identification Sticker near the control board to be replaced.

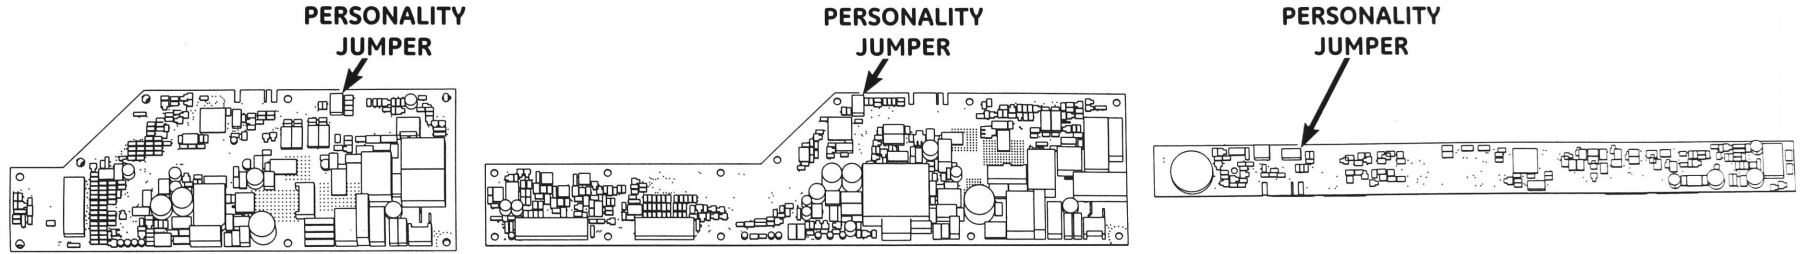

-OR-

- B.) On the table located on the back of this page.

- 2.) BEFORE installing, verify that the personality jumper on the board you are replacing matches the configuration selected in Step 1. If it does not, move accordingly.

NOTE: Keys/buttons and LEDs will not function until an appropriate personality is selected.

- 3.) Remove protective film on the LCD screen (some models).
- 4.) Install replacement control into unit.
- 5.) Validate board functionality.

Select the User Interface Appearance which best fits the unit you are servicing.

CONTROL TYPE	USER INTERFACE APPEARANCE	MODEL NUMBER*	USER INTERFACE BOARD JUMPER CONFIGURATION	MACHINE CONTROL JUMPER CONFIGURATION
FRONT		GDF510	NOT APPLICABLE	
FRONT		GDF520 GDF540 GDF570		NOT REQUIRED
TOP		GDT530		NOT REQUIRED
TOP		GDT550 GDT580 DDT575		NOT REQUIRED

* Derivative or special models may not be included in the model table.
 Select jumper configuration based off Identification Sticker in unit or closest User Interface Appearance shown above.