



SUBJECT: CC 91 LETTER FOR W10318609 (F)

DATE: 4/12/16 (REVISED TO ADD SEARS MODELS) 5/4/16 (REVISED TO ADD COLOR MODELS) 7/12/16 (REVISED TO ADD KIT W10907178 FOR ALPHA MAYTAG MODELS) 1/17/17 (REVISED TO ADD KIT W11033120 AND W11033124 FOR WHIRLPOOL CABRIO AND MAYTAG BRAVOS MODELS AND UPDATED THE WAY WE'LL HANDLE COLOR MODELS WHERE THE CUSTOMER WILL HAVE A CHOICE) 10/17/17 (REVISED TO ADD KIT W11123188 FOR ALPHA WHIRLPOOL MODELS)

Dryer door switch part number W10318609 is no longer available and has been on backorder. Production did a digit change to the new switch W10350906 which has a different footprint and required a new front panel.

In order to solve this backorder issue service engineering has created kits that correspond to the models that used the old switch and old front panel. These kits will contain the new switch W10350906, the new version front panel, and technician instructions W10874318. Kit W10907178 was created for the models show that will only include a switch and door switch seal; instructions not needed.

When the door switch W10318609 is ordered, the call taker will direct the customer to the correct kit number by locating the panel switch kit that corresponds to the customers model number listed below.

NOTE: If the customers model is not found on this letter then unfortunately we do not currently have a solution. On 11/15/16 we added Alpha Maytag models that can use kit W10907178. On 10/17/17 we added Alpha Whirlpool models that can use kit W11123188.

Dryer Door panel and switch kit W10874283 for the following models:

7MMGD0100TQ0	CET8000AQ1	CGD8990XW1	CGW9100WQ0
7MMGD0100TQ1	CET8000XQ0	CGT8000AQ0	MDE22PDAYW0
CDG8990XW1	CEW9100VQ0	CGT8000AQ1	MDE22PDZAW0
CED8990XW0	CEW9100WQ0	CGT8000XQ0	MDE22PDBYW0
CET8000AQ0	CGD8990XW0	CGW9100VQ0	MDE22PDBZW0

MDE22PRAYW0	MDG25PDAXW0	MGDZ400TQ1	MLG20PDAWW0
MDE22PRAZW0	MDG25PDAXW1	MGDZ400TQ2	MLG20PDBWW0
MDE22PRBYW0	MDG25PRAWW0	MGDZ600TW1	MLG20PRAWW0
MDE22PRBZW0	MDG25PRAWW1	MGDZ600TW2	MLG20PRBWW0
MDE25PDAYW0	MEDE200XW0	MLE20PDAYW0	YCED8990XW0
MDE25PDAZW0	MEDE200XW1	MLE20PDAZW0	YCED8990XW1
MDE25PRAYW0	MEDE201YW0	MLE20PDBYW0	YCEW9100VQ0
MDE25PRAZW0	MEDE301YW0	MLE20PDBYW1	YCEW9100WQ0
MDG22PDAWW0	MEDZ400TQ1	MLE20PDBZW0	YMEDE200XW0
MDG22PDAXW0	MEDZ400TQ2	MLE20PDBZW1	YMEDE200XW1
MDG22PDBWW0	MEDZ600TW1	MLE20PRAYW0	YMEDE201YW0
MDG22PDBXW0	MEDZ600TW2	MLE20PRAZW0	YMEDE301YW0
MDG22PRAWW0	MGDE200XW0	MLE20PRBYW0	YMEDZ400TQ0
MDG22PRBWW0	MGDE200XW1	MLE20PRBYW1	YMEDZ400TQ2
MDG25PDAWW0	MGDE201YW0	MLE20PRBZW0	YMEDZ600TW0
MDG25PDAWW1	MGDE301YW0	MLE20PRBZW1	

Kit contains the following parts:

- **Front panel assembly W10551278 (White)**
- **Door switch W10350906**
- **Instruction Sheet W10874318**

Dryer Door panel and switch kit W10874301 for the following models:

MEDE250XL0	MGDE250XL0	MGDE251YL0	YMEDE251YL0
MEDE251YL0	MGDE250XL1	YMEDE250XL0	

Kit contains the following parts:

- **Front panel assembly W10551279 (Silver)**
- **Door switch W10350906**
- **Instruction Sheet W10874318**

Dryer Door panel and switch kit W10874303 for the following models:

MEDE251YG0	MGDE251YG0	YMEDE301YG0
MEDE301YG0	MGDE301YG0	

Kit contains the following parts:

- **Front panel assembly W10551280 (Cosmetallic)**
- **Door switch W10350906**
- **Instruction Sheet W10874318**

Other models that could use the kits above W10874283 (white), W10874301 (silver), and W10874303 (cosmetallic) if customer accepts color substitution:

MEDZ600TB1	MEDZ600TK2	MGDZ600TK1	YMEDZ600TB2
MEDZ600TB2	MGDZ600TB1	MGDZ600TK2	YMEDZ600TK2
MEDZ600TE2	MGDZ600TB2	YMED9600TK0	YMEDZ600T
MEDZ600TK1	MGDZ600TE2	YMEDZ600TB0	

Dryer Door panel and switch kit W10874298 for the following models:

7MWGD8300SW0	WED9270XW1	WGD9150WW1	YWED9150WW1
7MWGD8300SW1	WED9270XW2	WGD9151YW0	YWED9151YW0
7MWGD9150XW0	WED9371YW0	WGD9250WW0	YWED9250WW0
7MWGD9150XW1	WGD8300SW0	WGD9270XW0	YWED9250WW1
7MWGD9150XW2	WGD8300SW1	WGD9270XW1	YWED9250WW2
WED9150WW1	WGD8300SW2	WGD9371YW0	YWED9270XW0
WED9151YW0	WGD8410SW0	YWED8300SW0	YWED9270XW1
WED9250WW1	WGD8410SW1	YWED8300SW1	YWED9270XW2
WED9270XW0	WGD9150WW0	YWED8300SW2	YWED9371YW0

Kit contains the following parts:

- **Front panel assembly W10551275 (White)**
- **Door switch W10350906**
- **Instruction Sheet W10874318**

Dryer Door panel and switch kit W10874299 for the following models:

7MWGD9270XL0	WED9270XL1	WGD9270XL1	YWED9270XL1
7MWGD9270XL1	WED9270XL2	WGD9371YL0	YWED9270XL2
WED9250WL0	WED9371YL0	YWED9250WL1	YWED9371YL0
WED9250WL1	WGD9250WL0	YWED9250WL2	
WED9270XL0	WGD9270XL0	YWED9270XL0	

Kit contains the following parts:

- **Front panel assembly W10551276 (Silver)**
- **Door switch W10350906**
- **Instruction Sheet W10874318**

Other models that could use the kits above W10874298 (white) or W10874299 (silver) if customer accepts color substitution:

7MWGD8500SR0	WGD8300SB0	YWED8300SB0	YWED9270XR2
7MWGD8500SR1	WGD8300SB1	YWED8300SB1	7MWGD9270XR0
7MWGD8500SR2	WGD8300SB2	YWED8300SE2	7MWGD9270XR1
WED9250WR1	WGD8300SE2	YWED8300SB2	WED9250WR0
WED9270XR0	WGD9250WR0	YWED9250WR1	YWED9250WR2
WED9270XR1	WGD9270XR0	YWED9270XR0	
WED9270XR2	WGD9270XR1	YWED9270XR1	

Dryer Door panel and switch kit W10874300 for the following models:

IGD7300WW1		110.C87561601
	110.87562601	
NED7300WW1		110.C87561602
	110.87562602	
NGD7300WW1		110.C87562600
	110.87562603	
WED9050XW1		110.C87562601
	110.87571601	
WED9051YW0		110.C87562602
	110.87571602	
WGD9050XW1		110.C87571600
	110.87571603	
WGD9051YW0		110.C87571601
	110.87572601	
WGD9051YW1		110.C87572601
	110.87572602	
YIED7300WW1		110.C87581600
	110.87572603	
YNED7300WW1		110.C87582600
	110.87581601	
YWED9050XW1		110.C87582601
	110.87582601	
110.86562501		110.C87582602
	110.87582601	
110.86572501		110.C96562501
	110.97562601	
110.87511700		110.C97561601
	110.C86502700	
110.87511701		110.C97561602
	110.C86502701	
110.87531700		110.C97562600
	110.C86502702	
110.87531701		110.C97562601
	110.C86512700	
110.87531702		110.C97562602
	110.C86572500	
110.87561601		110.C97572600
	110.C86572501	
110.87561602		110.C97582600
	110.C87561600	
110.87561603		

Kit contains the following parts:

- **Front panel assembly W10551277 (White)**
- **Door switch W10350906**
- **Instruction Sheet W10874318**

Dryer Door kit W10907178 for the following models:

MED6000XG2	MED9000YW2	MGD9000YG2	YMED7000XW3
MED6000XR2	MGD6000XG2	MGD9000YW2	YMED9000YG2
MED6000XW2	MGD6000XR2	YMED6000XG3	YMED9000YW2
MED7000XG2	MGD6000XW2	YMED6000XR3	
MED7000XW2	MGD7000XG2	YMED6000XW3	
MED9000YG2	MGD7000XW2	YMED7000XG3	

Kit W10907178 contains the following parts:

- **W10882363 Switch**
- **W10118614 Door switch seal**
- **675834 Sheet**

Dryer Door kit W11033120 (white front panel) for the following models:

WED8200YW0	WGD8600YW0	YWED8200YW0
WED8600YW0	WGD8600YW1	YWED8400YW0
WED8800YW0	WGD8800YW0	YWED8600YW0
WGD8200YW1	WGD8800YW1	YWED8800YW0

Kit contains the following parts:

- **Front panel assembly W10594753 (White)**
- **Door switch W10350907**
- **Instruction Sheet W11033125**
- **Cover, Door Switch W10215725**
- **Warning Labels W11036280**

Dryer Door kit W11033124 (chrome shadow front panel) for the following models:

WED8800YC0	WGD8800YC1
WGD8800YC0	YWED8800YC0

Kit contains the following parts:

- **Front panel assembly W10652269 (chrome shadow)**
- **Door switch W10350907**

- **Instruction Sheet W11033125**
- **Cover, Door Switch W10215725**
- **Warning Labels W11036280**

Dryer Door kit W11123188 for the following models:

WED94HEXL2	WED94HEXR2	WED94HEXW2	WED94HEXL2
WED95HEXW2	WED97HEXL3	WED97HEXW3	WGD94HEXL2
WGD94HEXR2	WGD94HEXW2	WGD95HEXL2	WGD95HEXW2
WGD97HEXL3	WGD97HEXW3	YWED94HEXL2	
YWED94HEXR2	YWED94HEXW2	YWED95HEXL2	
YWED95HEXW2	YWED97HEXL3	YWED97HEXW3	

Kit W11123188 contains the following parts:

- **W11047853 Door Switch**
- **W10118664 Gasket**
- **W11123186 Instruction Sheet**

Regards,
Whirlpool Corporation Consumer and Appliance Care