

Instruction Sheet

for P Trap Drain Tube Kit

Kit Contains:

- 1 P-Trap Drain Tube
- 1 Drain Valve
- 1 Instruction Sheet

Tools Needed:

- 1/4" Nut Driver
- Tape Measure / Marker
- Utility Knife

⚠ WARNING



Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

1. Unplug refrigerator or disconnect power.
2. Remove the machine compartment cover.
3. Determine your product type and the parts required:
For **Top Freezer models**, proceed to step 4.
For **French Door with Bottom Freezer models**, skip to step 5.
4. For **Top Freezer models**, use the included drain valve. Discard the p-trap drain tube included, it won't be needed.
 - a. Remove and replace the drain valve without modifications. See *Figure 1*.

IMPORTANT: Be sure to remove any ice blockage/obstructions in the freezer behind the evaporator cover and from drain tube.

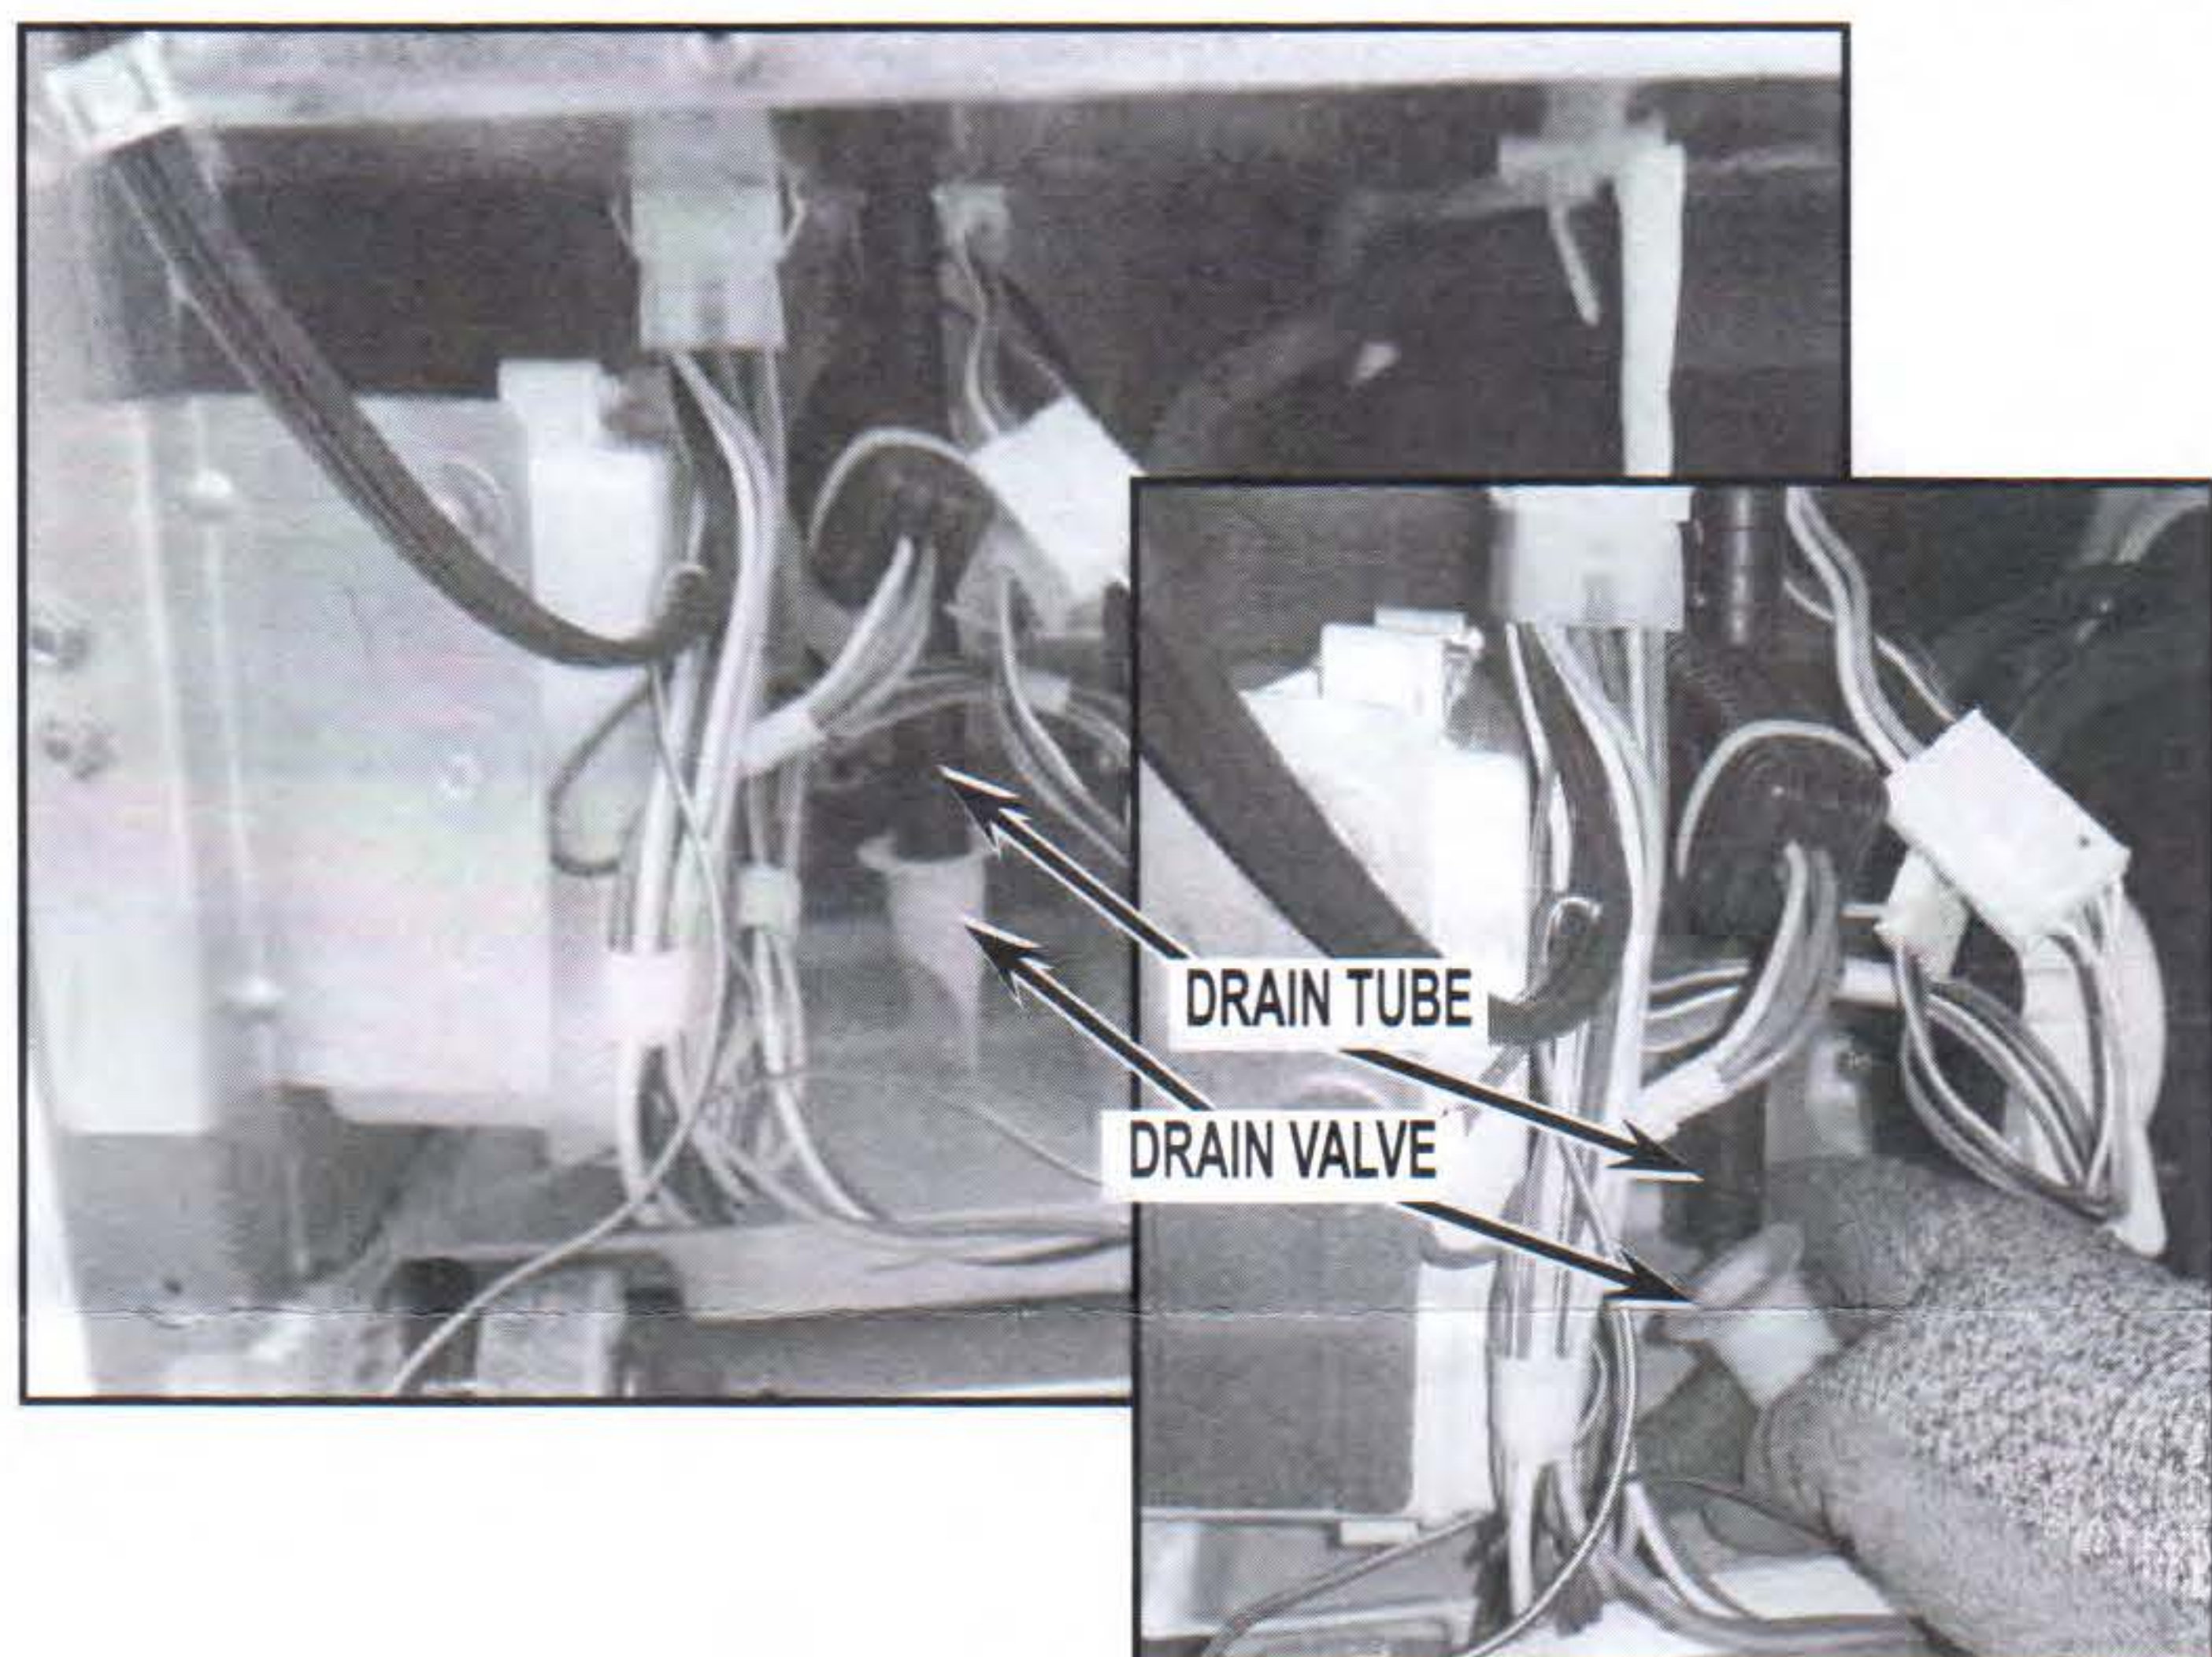


FIGURE 1

- b. When complete, skip ahead to step 9.
5. For **French Door with Bottom Freezer models**, use the included p-trap drain tube (following steps 5a OR 5b) - Discard the drain valve included, it won't be needed.
 - a. If the product originally had a p-trap drain tube, proceed to step 8, to remove and replace the p-trap drain tube without modifications.
 - b. If the product originally had a drain valve, complete the following steps to shorten the drain tube extending below the cabinet.
6. Remove existing drain trough funnel (if applicable) and drain valve from the drain tube and discard. See *Figure 1*.

IMPORTANT: Be sure to remove any ice blockage/obstructions in the freezer behind the Evaporator cover and from drain tube.

7. Measure 46mm (1 3/4") from the bottom of the drain tube, make a mark and use a utility knife to cut the drain tube. See *Figure 2*.

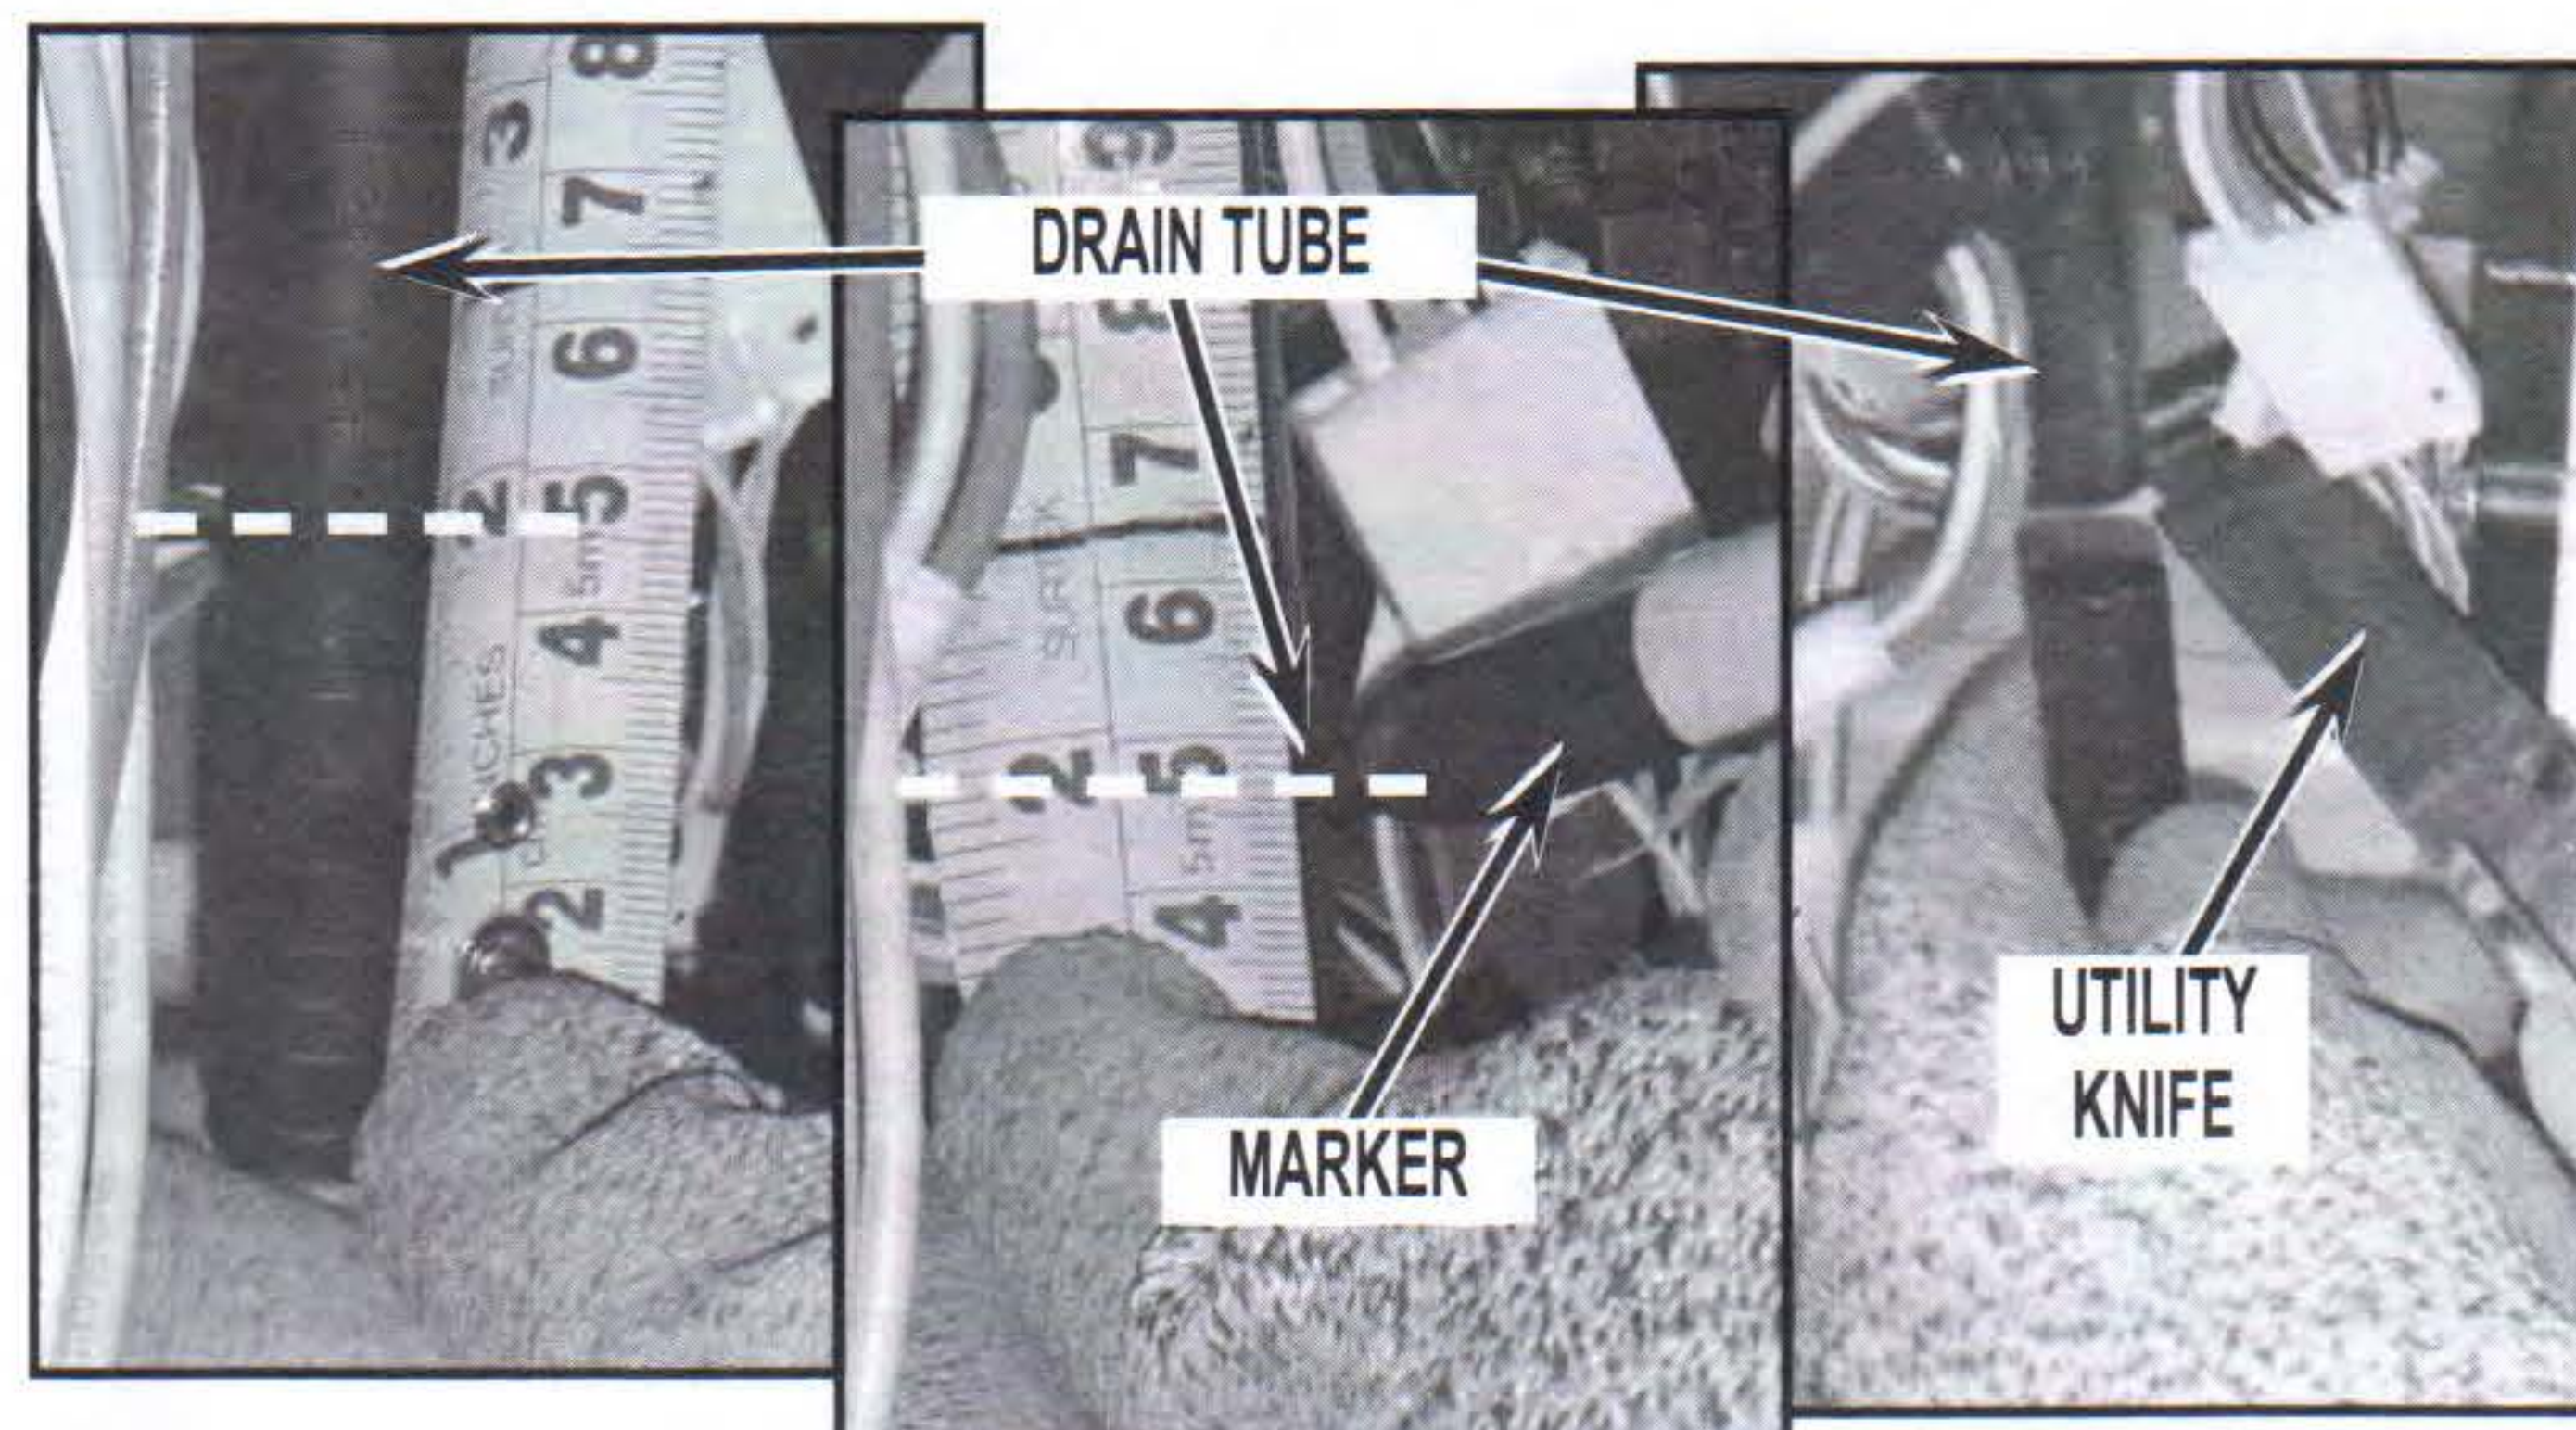


FIGURE 2

8. Assemble the P Trap to the drain tube, making sure water will fall into the drain tray. See *Figure 3*.

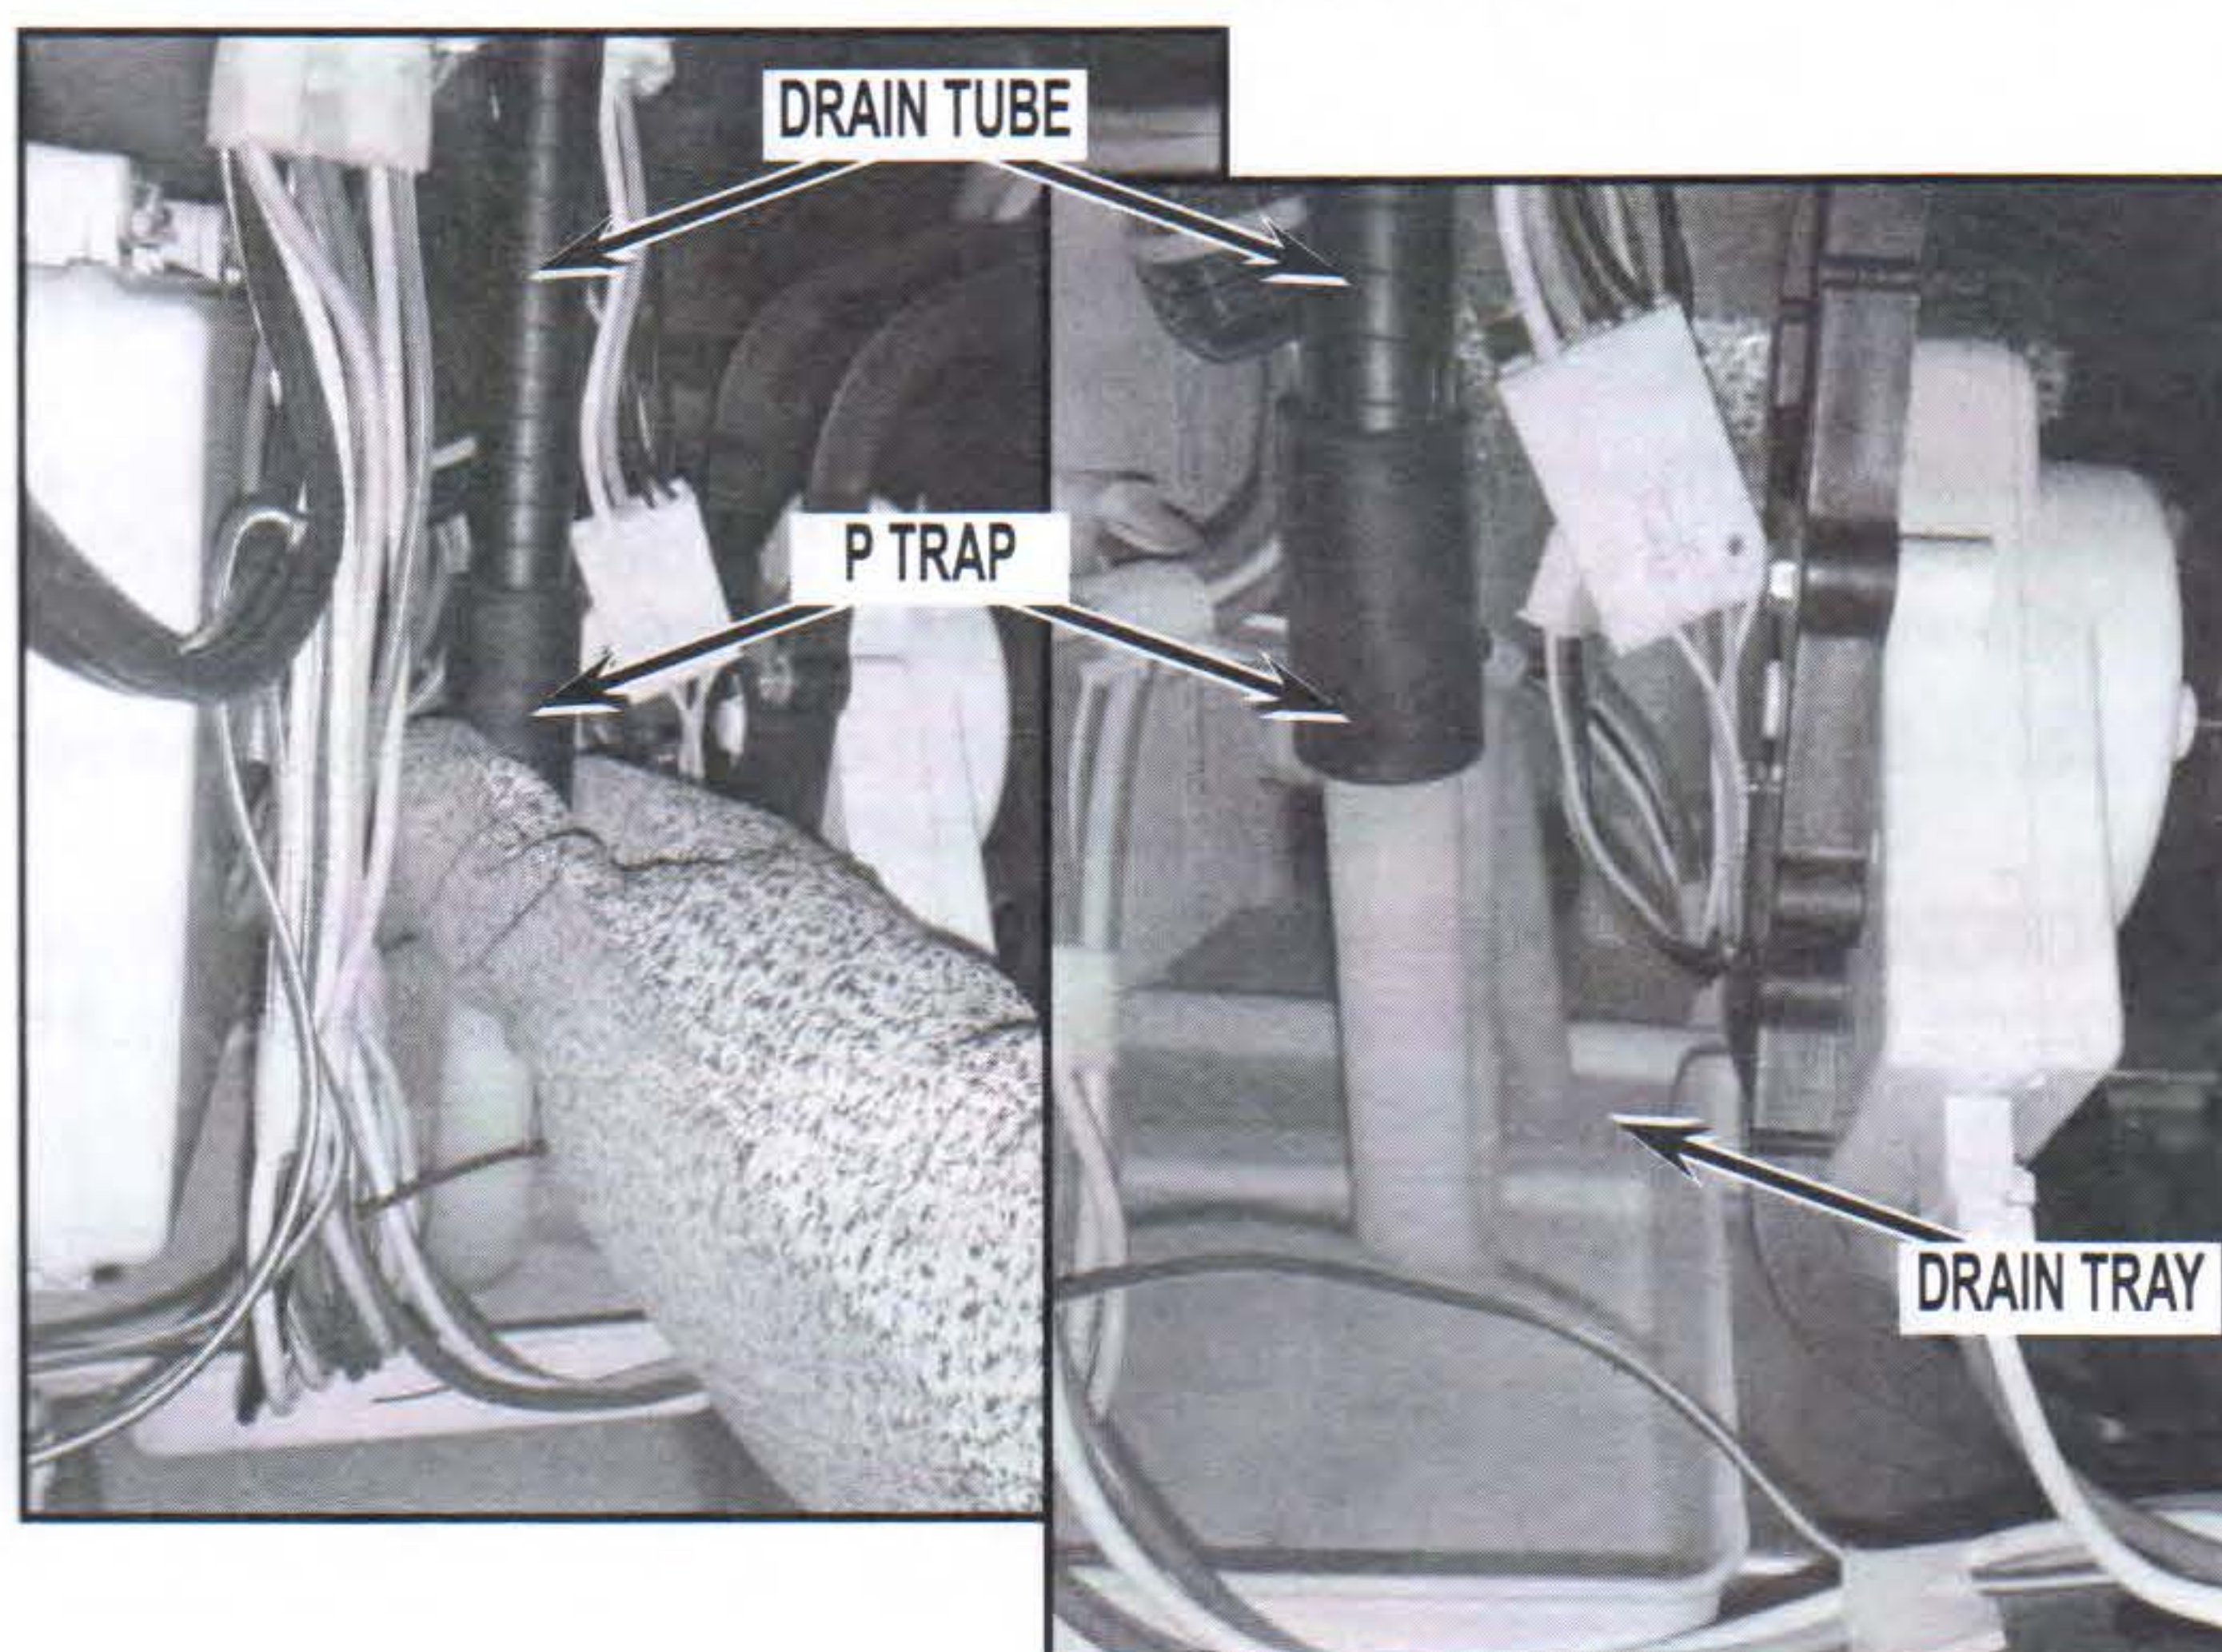


FIGURE 3

9. Replace machine compartment cover.
10. Replace all parts and panels.

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

11. Plug in refrigerator or reconnect power.