



INSTALLATION INSTRUCTIONS

Whole House Connector Kit For Valve in Head Water Filters - Model CK2

(Please read thoroughly BEFORE proceeding. Please save for future reference.)


INTRODUCTION

This kit is designed to hook up most deluxe valve in head water filters (with 3/4" inlet & outlet) to serve the whole house. The incoming cold water line must be 1/2" or 3/4" copper or plastic pipe.

Tools Required : Pipe/tube cutter and two adjustable wrenches or pliers.

INSTRUCTIONS

1. Select filter location on horizontal pipe after existing shut off valve. Shut off and drain pipes.
2. Using a tube cutter cut exactly 6" out of 1/2" pipe (for 3/4" pipe cut exactly 6 1/4") and remove burrs. Put a mark 2" from each end of the pipe.
3. Using parts shown in Fig. 1:
 - A. Hold 3/4" ends of adaptor bodies facing you and tightly wrap half of thread tape on each of the 3/4" threads in clockwise direction. Thread adaptors into filter head ports and tighten securely with wrench.
 - B. Slide nuts and bushings over ends of 1/2" pipe as shown. Push bushings into nuts. Note: Bushings not required for 3/4" pipe.
 - C. Slide 1/2" locking rings and ferrules over ends of pipe so that ferrule is 1/4" from pipe end (use 3/4" locking rings & ferrules for 3/4" pipe).
4. With filter inlet port facing water source, tip head down and slide one end then the other over pipe, moving pipe if required. Thread nuts onto bodies 1-2 turns. Centre filter between 2" marks and tighten nuts hand tight plus 2 turns with a wrench while holding body of second wrench.
Note: Squeaking sound during tightening is normal.
5. Reassemble filter (see unit instructions). Turn handle to "on" position. Turn on water supply. Check for leaks with water running and stopped.
Tighten fittings if necessary.

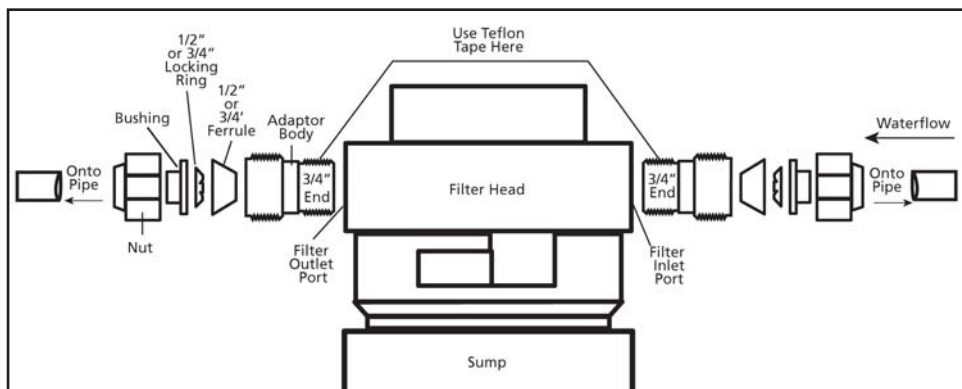

Envirogard Products Limited
446 Major Mackenzie Dr. E., Unit 6, Richmond Hill, ON Canada L4C 1J2
P.O. Box 64, Richmond Hill, ON L4C 4X9
Toronto & Area: (905) 884-9388

Help Line: 1-800-667-8072

www.rainfresh.ca

CK2 Inst E/F Jul/07