

# Installation Instructions

## Spray Arm Installation Instructions

WD35X10393

November 2012

**Models Included: GDF510PGD0,  
GDF520PGD0, GDT530PGD0,  
GDF540HGD0 & GDT550HGD0**


**No Tools will be required, spray arms are “twistlock” design. Replace both spray arms in this kit as a set.**

### **Parts Included:**

- Lower Spray Arm
- Mid Spray Arm
- Installation Instructions

### **To remove lower spray arm**


1. Open the door and remove the lower rack.
2. Turn the locking hub on the lower spray arm counterclockwise to remove the lower spray arm.

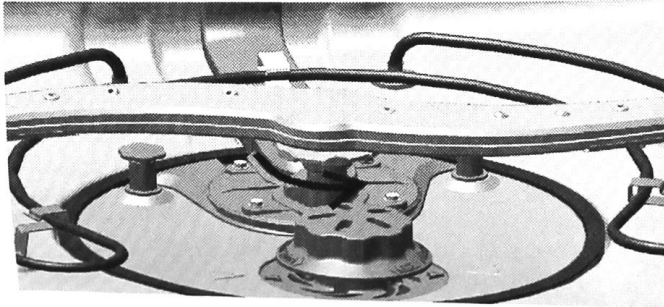

3. **New Lower spray arm has the metal shields on the bottom.** Reverse the procedure to install the spray arm. **Make sure the spray jets are pointed upwards.**

### **To remove mid spray arm**

1. Extend the upper rack for easier access.
2. Turn the locking hub clockwise (as viewed from the top) to remove the mid spray arm.

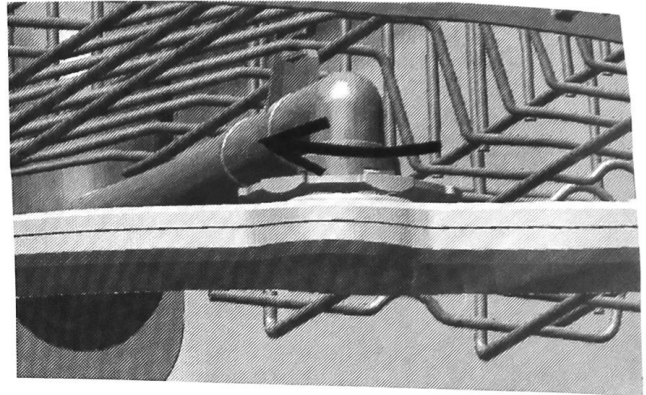

3. Reverse the procedure to install the spray arm. **Make sure the spray jets are pointed upwards.**

